



Cellular Shades Framed Skylight & Room Darkening System

MAXXMAR WINDOW FASHIONS

150 Bartor Road, Toronto, Ontario M9M 1H1
Tel: 416-742-6299 - Toll Free: 1-866-916-6299
Fax: 416-742-1772
www.maxxmar.com



Tools Required

- Pencil/marker for layout
- Measuring tape
- Screwdriver or socket driver
- Level (spirit or laser)
- Drill/driver with bits
- Wall anchors (if mounting into drywall without studs)
- Ladder or scaffold (if needed)



WARNING STRANGULATION HAZARD

YOUNG CHILDREN CAN BE STRANGLED BY CORDS.
IMMEDIATELY REMOVE THIS PRODUCT IF A CORD
LONGER THAN 22 CM OR A LOOP EXCEEDING
44 CM AROUND BECOMES ACCESSIBLE.

MISE EN GARDE RISQUE D'ÉTRANGLEMENT



LES ENFANTS EN BAS ÂGE PEUVENT S'ÉTRANGLER AVEC DES
CORDES. ENLEVEZ IMMÉDIATEMENT CE PRODUIT SI UNE CORDE
MESURANT PLUS DE 22 CM DEVIENT ACCESSIBLE OU SI LE CONTOUR
D'UNE BOUCLE DE PLUS DE 44 CM DEVIENT ACCESSIBLE.

1. Components




- Unpack and identify all components: motor, side rails/channels (L/R), bottom bar/rail, top rail, T-shaped cover, screws, and optional accessories.

2. Attaching Headrail & Motor Drive Shaft to Side Rail/Channels

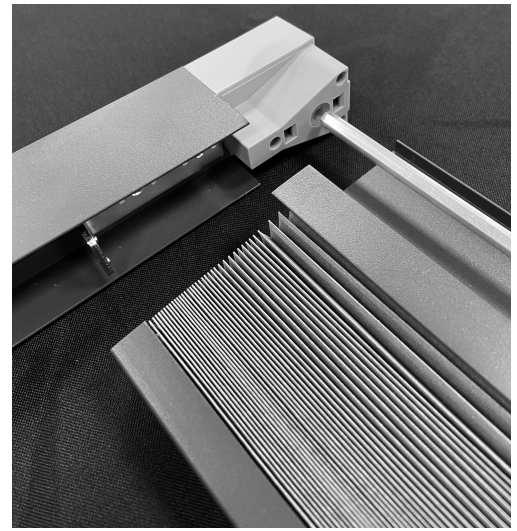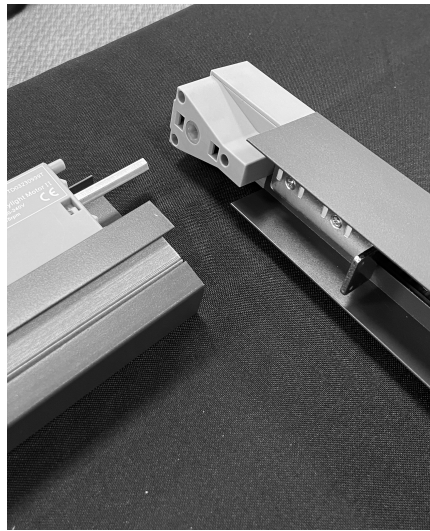


- Insert the shaft/rod into the right-hand drive box until it clicks.
- Repeat this step for the left-hand drive box.
- Confirm both are fully seated. (The drive box is located at the top of each side rail.)

3. Attaching Bottom Bar/Rail to Side Rails/Channels

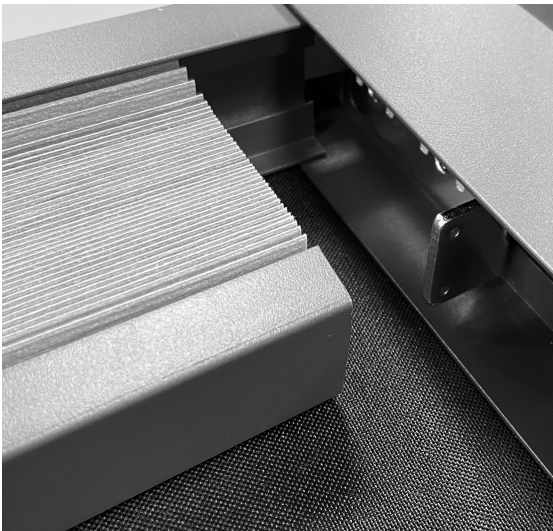

- Mount the bottom bar/rail onto the metal control clips on each of the side rails/channels.
- Ensure it sits evenly.
- This is the component that raises and lowers the fabric.

4. Inserting Headrail/Motor Cover

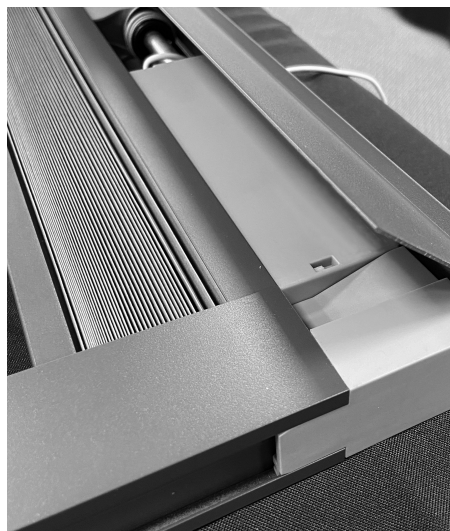

- Snap on the T-shaped cover to conceal the motor and components.

5. Installing Into Opening



- Insert the assembled unit into the opening.
- Drill through the pre-tapped holes on the side rails/channels and bottom channel.
- Test that the unit is securely mounted at all four mounting points.

6. Final Inspection

- Make sure all screws are tight, rails are square, and fabric tracks smoothly.
- Power on and test with the remote. If the shade does not respond, confirm that the motor is locked in place, the rod or shaft is secure, and power is connected.
- Reset the motor if needed.

7. Operation

- Use the remote control to operate the product.
- If programming is required, see the programming instructions (separate document).