



## Dream Shade Instructions

### MAXXMAR WINDOW FASHIONS

150 Bartor Road, Toronto, Ontario M9M 1H1

Tel: 416-742-6299 - Toll Free: 1-866-916-6299

Fax: 416-742-1772

[www.maxxmar.com](http://www.maxxmar.com)



### 1. Tools Required

- Pencil/marker for layout
- Measuring tape
- Screwdriver or socket driver
- Level (spirit or laser)
- Drill/driver with bits
- Wall anchors (if mounting into drywall without studs)
- Ladder or scaffold (if needed)



### **! WARNING STRANGULATION HAZARD**

YOUNG CHILDREN CAN BE STRANGLED BY CORDS.  
IMMEDIATELY REMOVE THIS PRODUCT IF A CORD  
LONGER THAN 22 CM OR A LOOP EXCEEDING  
44 CM AROUND BECOMES ACCESSIBLE.

### **! MISE EN GARDE RISQUE D'ÉTRANGLEMENT**

LES ENFANTS EN BAS ÂGE PEUVENT S'ÉTRANGLER AVEC DES  
CORDES. ENLEVEZ IMMÉDIATEMENT CE PRODUIT SI UNE CORDE  
MESURANT PLUS DE 22 CM DEVIENT ACCESSIBLE OU SI LE CONTOUR  
D'UNE BOUCLE DE PLUS DE 44 CM DEVIENT ACCESSIBLE.

## 2. Parts Included



Manual



Motorized

- Headrail/track assembly: manual or motorized (includes remote control).
- Mounting brackets: inside/ceiling brackets or wall-mount L-brackets.
- Fabric vanes.
- Screws and mounting hardware.

## 3. Bracket Installation - Ceiling



- Hold the bracket against the ceiling or soffit at a marked position.
- Ensure minimum depth of 3" for proper installation.
- Mark screw hole positions with pencil.
- Drill pilot holes and fasten brackets with screws.

## 4. Bracket Installation - Wall Mount




- Measure and mark a level line above the window or door opening.
- Align wall-mount L-brackets along the line.
- Mark screw hole positions.
- Drill pilot holes and secure them with screws (use wall anchors if no studs).

## 5. Attaching the Headrail

- Lift headrail into position above brackets.
- Hook the front lip of the headrail into each bracket.
- Rotate the headrail upward until the back edge snaps securely into place.
- Check that every bracket is locked before proceeding.

## 6. Hanging the Fabric Vanes

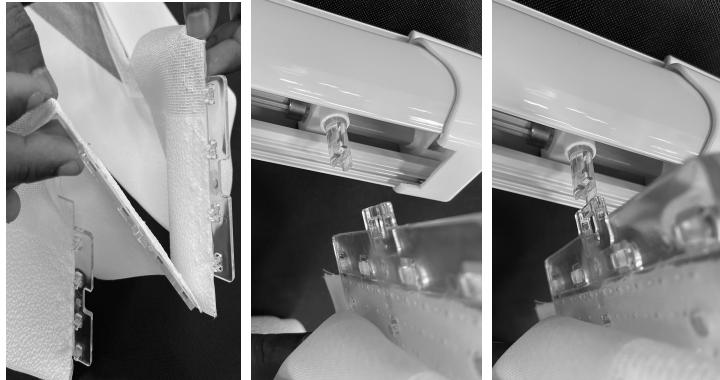

- Tilt carriers in the headrail to the open position.
- Align each vane's header clip with a carrier peg.
- Push upward until it clicks into place.
- Ensure vane edges interlock properly to reduce light gaps.
- Repeat until all vanes are installed.

## 7. Controls - Manual Model

- Slide wand to traverse the vanes open or closed.
- Twist wand to tilt vanes for light and privacy control.

## 8. Controls - Motorized Model

- Pair remote control with motor unit following product instructions.
- Test open, close, and tilt functions using remote control.

## 9. Final Check


- Traverse shade fully open and closed to confirm smooth movement.
- Test vane tilt for proper light control and privacy.
- Ensure vanes part smoothly for walk-through access.
- Adjust vane alignment if required.

## 10. Operation

- For Wand Control, use wand to traverse or twist to operate product
- For motorization, use remote control to operate product.

## 11. Mounting to Wall, Window Frame or Ceiling

1. Mount the brackets to the wall, window frame or ceiling.

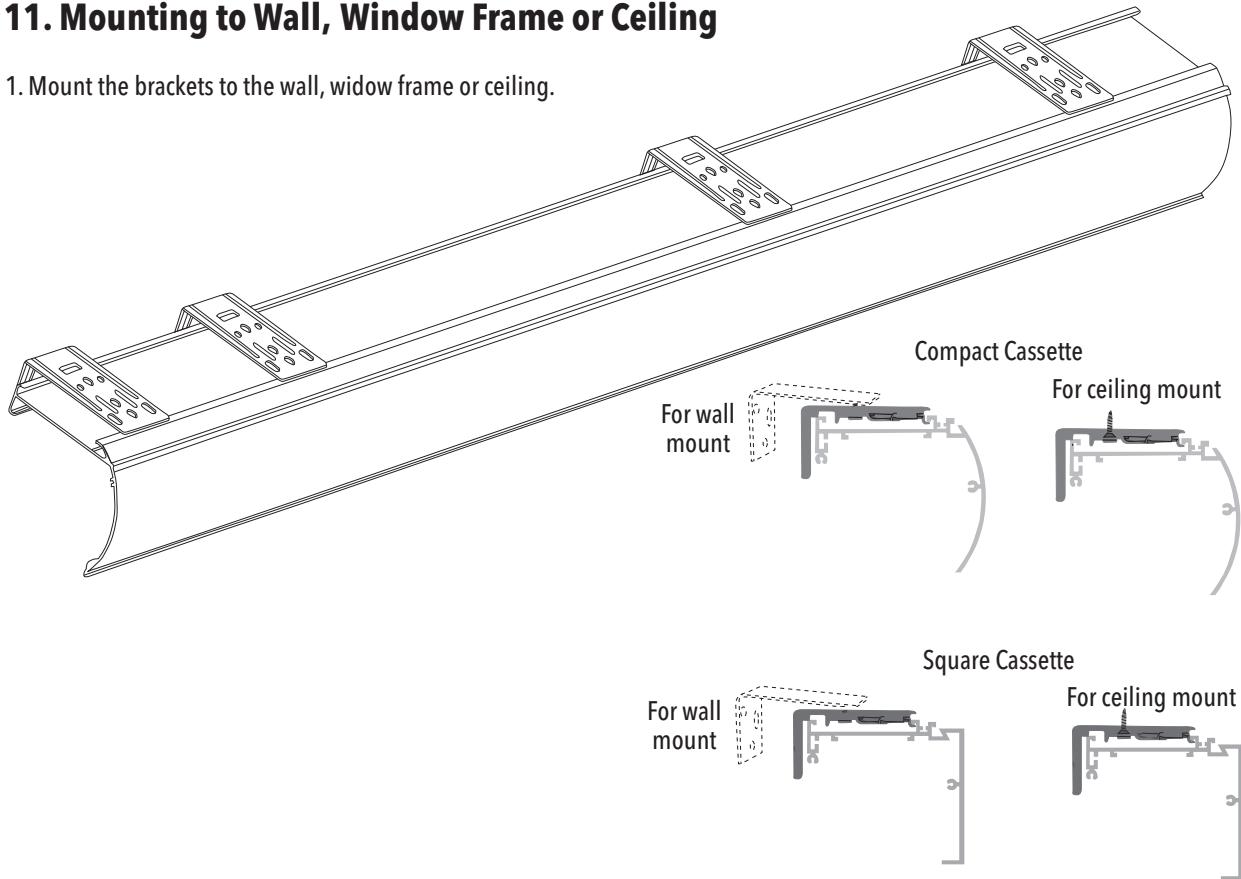



**Important: Use drywall anchors when mounting into drywall. Drywall anchors are not provided.**

### Aligning / Realigning the Carriers

**Note:** All tracks come with the carriers facing the correct direction.


Before installing the Dream Shade vane clips into the carriers, it is important to make sure the carriers are properly aligned.

2. Turn the wand until the carriers stop rotating. The carriers should turn together and face the same direction.
3. If some carriers seem to be misaligned, continue turning the wand until you hear the cranking sound of the clutch operating. Keep pulling or turning until the misaligned carriers are automatically adjusted.
4. If a carrier is still facing the wrong direction after following steps 1 and 2, manually (or with pliers if necessary) rotate it back.

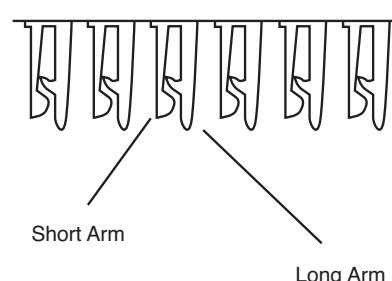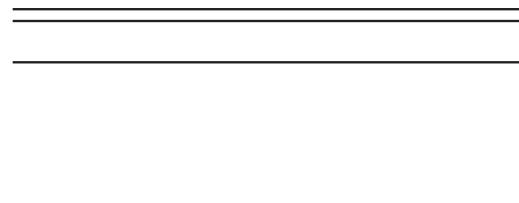


### Installing the Dream Shade Vane Clips

- 4A. Before installing the Dream Shade Vane Clips, make sure the carriers are positioned as in Fig. A.

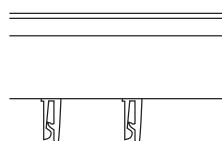

- 4B. Insert the vanes into the carriers. Make sure all the Dream Shade Vane Clips are facing in the same direction (see Fig. B).

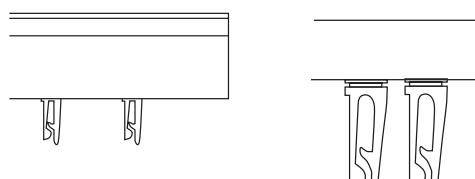

(Fig. A)

(Fig. B)