


Adjusting Cordless Cellular Shade

1. Raise shade fully. Remove shade from installation brackets using a flathead screwdriver. Insert tip of screwdriver between the back of the headrail and the bracket.



2. Raise and lower shade to see if it works while not in the brackets. If the shade raises and lowers correctly, move the end brackets so they are a minimum of 3" in from each end.

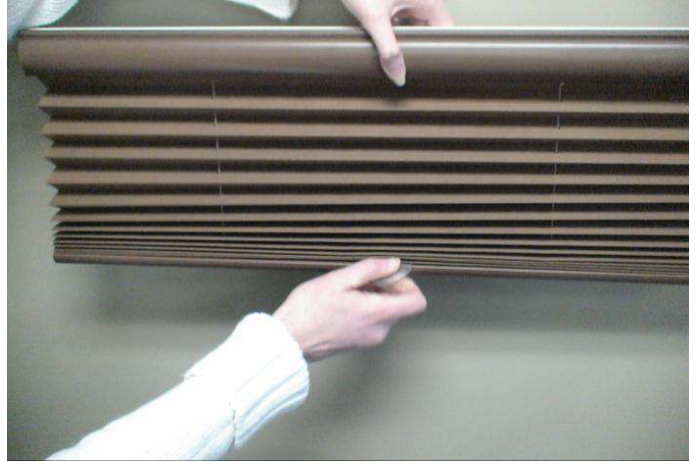

3. If the shade does not raise, it may be over extended. Remove the dust cover using a flat head screwdriver. Starting with the top corner, run the screwdriver across the top. Put pressure on the back to remove.

Note: Do not remove the end caps.



4. Manually turn the rod 2 turns toward the back of the shade. Now raise the shade using the handle.



5. Replace the dust cover.



6. Raise and lower the shade several times to ensure proper operation.



7. Reinstall shade back into brackets by attaching front of shade to the front of the brackets. Push back on shade until it snaps into place.

